

# H422V5 User manual



# Contents

Co	ontents	<b>2</b>
1	Parameter list	3
2	Parameter remarks	6
3	Alarm list	7
4	Slave alarm list	7
5	Button list	8
6	Led list	8
7	Soft command list	8
8	How to	8
9	Shortcut list	9
10	Led and push button location	9



# 1 Parameter list

Rem.	Parameter	Description	Minimum	Maximum	Default	Unit
S		Functions about storage				
St_		Functions about storage temperature				
_t0		storage room temperature	-55.0	145.0	2.0	°C
	_tb	dead band	0.0	50.0	0.0	K
	_td	differential	0.0	50.0	0.2	К
	_tH	maximum set point of temperature from slave keyboard	-55.0	145.0	45.0	°C
	_tL	minimum set point of temperature from slave keyboard	-55.0	145.0	-55.0	°C
	_i0	storage room humidity	0.0	100.0	85.0	%
	_ib	dead band	0.0	50.0	0.0	%
	_id	differential	0.0	50.0	5.0	%
	_iH	maximum set point of humidity from slave keyboard	0.0	100.0	100.0	%
	_iL	minimum set point of humidity from slave keyboard	0.0	100.0	0.0	%
	SA_	Functions about air renew during storage				
	SAH	enable air renew during storage	oFF	_on	oFF	/
	SA0	immediate delay before first air renew	0	194 4:20:15	0	dd hh:mm:ss
	SAd	on-time duration in the air renew cycle	0	194 4:20:15	30:00	dd hh:mm:ss
	SAP	period of air renew cycle	0	194 4:20:15	12:00:00	dd hh:mm:ss
	SAh	enable forced air renew by keyboard short cut	oFF	_on	_on	/
	SAF	forced air renew duration	0	194 4:20:15	30:00	dd hh:mm:ss
	SAo	start / stop forced air renew	oFF	_on	oFF	/
	Fd_	Functions about defrost duration and timing				
1	Fd0	immediate delay before next defrost	0	194 4:20:15	0	dd hh:mm:ss
	Fdd	on-time duration of the defrost	0	194 4:20:15	30:00	dd hh:mm:ss
	Fdg	dripping time after defrost	0	194 4:20:15	2:00	dd hh:mm:ss
	FdE	evaporator fan activation delay after the defrost	0	194 4:20:15	15:00	dd hh:mm:ss
2	FdP	overall period of the defrost	0	194 4:20:15	4:00:00	dd hh:mm:ss
	FF_	Functions about forced defrost				
	FFh	enable forced defrost by keyboard short cut	oFF	_on	_on	/
	FFd	forced defrost duration	0	194 4:20:15	30:00	dd hh:mm:ss
3	FFo	start immediate forced defrost	oFF	_ <sup>on</sup>	oFF	/
	FP_	Functions about defrost preference				
4	FPt	defrost type: 0=none / 1=pause / 2=air / 3=electric / 4=hot gas / 5=heat pump / 6=heat pump by hp	0	255	2	/
	Ft_	Functions about defrost temperature				
5	Ftt	defrost stop temperature	-55.0	146.0	6.0	°C
	M	Functions about compressor				
	MU_	Functions about pressure switches				
6	MLH	low pressure safety restart ( similar to Danfoss KP15 lp set point )	0.0	99.0	1.2	(gauge) bar
	MLL	low pressure safety stop ( similar to Dantoss KP15 Ip set point - differential )	0.0	99.0	0.2	(gauge) bar
	MHH	high pressure safety stop ( similar to Danfoss KP15 hp set point )	0.0	99.0	28.0	(gauge) bar
_	MHL	high pressure safety restart ( similar to Dantoss KP15 hp set point - differential )	0.0	99.0	24.0	(gauge) bar
7	MUO	minimum oil differential pressure	0.0	30.0	2.0	(gauge) bar
8	MUU	enable pump down	o⊦F	_on	o⊦F	/
	Н					
	нΡ_	Heating preference	^	055	<u> </u>	1
	нрр	pump / 5=ihp2	0	255	0	1
	HPF	heating source: 0=dedicated heating / 1=defrost / 2=light	0	2	0	/
	0	Dehumidification				
	UP_	Denumidification preference				



# doc H422V5

Rem.	Parameter	Description	Minimum	Maximum	Default	Unit
	UPP	alternate refrigeration and heating	oFF	_on	oFF	/
9	UP1	during concurrent run force active heating	oFF	_on	oFF	/
	n	Functions about fans				
	nc_	Functions about condenser fans				
	ncH	enable condenser fans when compressor is off and discharge pressure is over $\ensuremath{maxi-mum}$	oFF	_on	_ <sup>on</sup>	/
10	ncr	enable condenser fans speed regulation	oFF	_on	_on	/
11	ncU	fan minimum speed	0	255	40	/
	ncd	minimum HP-LP-difference to keep on fans	0.0	99.0	2.0	(gauge) bar
	n1H	fan 1 start pressure ( similar to Danfoss KP5 set point ) - active just when ncr is oFF $% \left( {{\left[ {{{\rm{SF}}} \right]}_{\rm{T}}}} \right)$	0.0	99.0	10.0	(gauge) bar
12	n1L	fan 1 stop pressure ( similar to Danfoss KP5 set point - differential )	0.0	99.0	6.0	(gauge) bar
	nE_	Functions about evaporator fans				
	nEH	force evaporator fans when refrigeration is off	oFF	_on	oFF	/
	c	Functions about door and light				
	cP_	Door switch and evaporator fan				
	cPH	stop evaporator fans when door is open	oFF	_on	_on	/
	cPF	pause defrost timer when air defrost is suspended by evaporator fan stop	oFF	_on	_on	/
	cPd	delay of fan automatic switch on	0	194 4:20:15	30:00	dd hh:mm:ss
	cl_	Functions about light				
	cIH	switch on the light when the door is open and off when closed	oFF	_on	_on	/
13	clo	switch off the light automatically if it has been switched on from outside	oFF	_on	_on	/
	cld	delay of light automatic switch off	0	194 4:20:15	30	dd hh:mm:ss
	v	Functions about electronic expansion valve				
	vP_	Functions about electronic expansion valve preference				
14	vPH	enable electronic expansion valve	oFF	_on	_on	/
	vt_	Functions about electronic expansion valve temperature				
15	vtt	wanted overheating (similar to Danfoss thermostatic overheating spring regulation)	0.0	99.0	8.0	K
	vtU	maximum pressure allowed in the suction line (similar to Danfoss MOP)	0.0	30.0	10.0	(gauge) bar
	vd_	Functions about electronic expansion valve timing				
16	vd1	on-off duty cycle duration	0	194 4:20:15	8	dd hh:mm:ss
17	vd2	on duty cycle duration at refrigeration start (set to 0 for previous stop value)	0	194 4:20:15	5	dd hh:mm:ss
18	vdd	on duty cycle adaptation speed (low value for slow adaptation and small swinging)	0	255	8	/
	b	Functions about probe calibration				
	b1_	Probe nr. 1				
	b1C	room temperature	-99.0	99.0	0.0	К
	b1A	enable probe	oFF	_on	_on	/
	b2_	Probe nr. 2				
	b2C	defrost temperature	-99.0	99.0	0.0	К
	b2A	enable probe	oFF	_on	_on	/
	b3_	Probe nr. 3				
	b3C	suction temperature	-99.0	99.0	0.0	К
	b3A	enable probe	oFF	_on	_on	/
	b4	Probe nr. 4				
19	b4C	engine room temperature	-99.0	99.0	0.0	К
	b4A	enable probe	oFF	_on	on	1
	b5_	Probe nr. 5				
	b5C	humidity	-99.0	99.0	0.0	%
	b5A	enable probe	oFF	on	oFF	/
	b6	Probe nr. 6		_		
	b6C	high pressure (HP)	-99.0	99.0	0.0	bar
	b6A	enable probe	oFF	_on	on	1
	b7_	Probe nr. 7		_		



# doc H422V5

Rem.	Parameter	Description	Minimum	Maximum	Default	Unit
	b7C	low pressure (LP)	-99.0	99.0	0.0	bar
	b7A	enable probe	oFF	_on	_on	/
b8_ b8C		Probe nr. 8				
		discharge temperature	-99.0	99.0	0.0	К
	b8A	enable probe	oFF	_on	_on	/
	b9_	Probe nr. 9				
	b9C	oil pressure - eventually connected to AN-5	-99.0	99.0	0.0	bar
	b9A	enable probe	oFF	_on	oFF	/
	L	Functions about alarm and stand-by				
	Lt_	Temperature alarm				
20	LtL	low temperature alarm set point	-55.0	145.0	-2.0	°C
21	LtH	high temperature alarm set point	-55.0	145.0	14.0	°C
	Ltd	alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	LF_	Full stop temperature alarm				
	LFL	low temperature alarm set point	-55.0	145.0	-5.0	°C
	LFH	high temperature alarm set point	-55.0	145.0	20.0	°C
	LFd	alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	Li_	Humidity alarm				
	LiL	low humidity alarm set point	0.0	100.0	0.0	%
	LiH	high humidity alarm set point	0.0	100.0	100.0	%
	Lid	alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	Lj	Full stop humidity alarm				
	LjL	low humidity alarm set point	0.0	100.0	0.0	%
	LjH	high humidity alarm set point	0.0	100.0	100.0	%
	Ljd	alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	LO_	Door alarm				
	LOH	enable door alarm	oFF	_on	_on	/
	LOd	door alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	LOt	temperature alarm minimum delay after door opening	0	194 4:20:15	15:00	dd hh:mm:ss
	LI_	Other alarm inputs				
	L1H	enable digital input 1 alarm (compressor safety devices)	oFF	_on	_on	/
	L1d	digital input 1 alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	L2H	enable digital input 2 alarm (evaporator safety)	oFF	_on	_on	/
	L2d	digital input 2 alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	L3H	enable digital input 3 alarm (heating safety thermostat)	oFF	_on	_on	/
	L3d	digital input 3 alarm delay	0	194 4:20:15	30:00	dd hh:mm:ss
	L5H	enable digital input 5 alarm (compressor phase monitor / thermal overload relay)	oFF	_on	_on	/
	L5d	digital input 5 alarm delay	0	194 4:20:15	1	dd hh:mm:ss
	Lo_	On / stand-by status				
22	Loo	actual status: stand-by or on	oFF	_on	oFF	/
	d	Functions about delays				
	dF_	Delay from previous stop				
	dF4	delay from stop to activation of relay nr. 4 - compressor	0	194 4:20:15	5:00	dd hh:mm:ss
	P	Functions about master preferences				
	Pd_	Functions about network address				
	PdM	master address for global network communication	0	254	1	/
	PdS	number of slaves connected to this master	1	2	2	/
	PO	Output assignment				



Rem.	Parameter	Description	Minimum	Maximum	Default	Unit
	PO2	assign out-2 relay to: 0=alarm / 1=heating / 2=steam / 3=air renew / 4=defrost duty / 5=steam on FAN / 6=outer dehum / 7=OUT1 / 8=OUT3 / 9=OUT4 / 10=OUT5 / 11=OUT6 / 12=FAN / 13=alarm NO / 14=fan off dehum / 15=drain pump / 16=ss FAN / 17=16+2rm / 18=17+drp / 19=18+sdrp OUT6 / 20=5+14 / 21=alt heat ev / 22=19+ss OUT3 / 23=depr OUT2 / 24=Loo / 25=off / 26=ss OUT3 / 27=mc part / 28=eco OUT3 / 29=28+ip / 30=27+28 / 31=27+29 / 32=29+es AN2 / 33=27+32 / 34=ev FAN / 35=34+2 / 36=ss / 37=34+2mcs / 38=37+steam OUT3	0	255	0	/
	I	Functions about input-output and machine state (read only)				
	IA_	Analog inputs				
	IA1	room temperature	-55.0	145.0	-55.0	°C
	IA2	defrost temperature	-55.0	145.0	-55.0	°C
	IA3	suction temperature	-55.0	145.0	-55.0	°C
	IA4	engine room temperature	-55.0	145.0	-55.0	°C
	IA5	humidity	0.0	100.0	0.0	%
	IA6	high pressure (HP)	0.0	30.0	0.0	(gauge) bar
	IA7	low pressure (LP)	0.0	30.0	0.0	(gauge) bar
	IA8	discharge temperature	-55.0	145.0	-55.0	°C
	IA9	oil pressure - eventually connected to AN-5	0.0	30.0	0.0	(gauge) bar
	ld_	Digital input				
	ld1	compressor hardware safety	oFF	_on	oFF	/
	ld2	evaporator hardware safety	oFF	_on	oFF	/
	ld3	defrost hardware safety	oFF	on	oFF	/
	ld4	door closed	oFF	on	oFF	/
	ld5	phase software safety	oFF	_on	oFF	/
	OS_	Machine status				
	OSn	evaporator fan stopped by door opening or manual control	oFF	on	oFF	/
	OA	Analog output				
	LLA	actual alarm - read only (0 means no alarm)	0	255	0	/
	OA1	condenser	0	255	0	/
	OA2	humidity - 420 mA	0	255	0	/
	Od	Digital output				,
23	Od1	solenoid	oFF	on	oFF	/
	Od2	heating	٥FF	on	٥FF	
	Od3	light	oFF	on	٥FF	/
	Od4	compressor	٥FF	on	٥FF	
	Od5	evaporator	oFF	on	oFF	/
	Od6	defrost	٥FF	on	٥FF	
	Od7	alarm - eventually connected to OUT-2	٥FF	_ on	oFF	/
	Od8	steam producer - eventually connected OUT-2	oFF	 on	oFF	/
	Od9	air renew - eventually connected to OUT-2	oFF		oFF	/
	E	Functions about slave preferences				,
	Ed	Functions about network address				
	_ EdS	slave address for local network communication	1	254	1	/
	EY	Functions about display	-		-	,
	EYY	input to show on display: 1=IA1 / 2=IA2	0	255	1	/

# 2 Parameter remarks

Nr. Remark

1  $\;$  Defrost is not performed twice in case safety switches of mc or evaporator are not ok.



#### Nr. Remark

- 2 The period of each cycle includes on-time + off-time, that is the overall duration of the cycle.
- 3 Following defrost cycles will be aligned to the end of forced one.
- 4 Add 100 to FPt parameter to enable the outer defrost drive on INP-4. The defrost is initiated by INP-4 closure; after defrost and until INP-4 is closed, the instrument does not leave the dripping mode, to coordinate with eventual other instruments.
- 5 In case of hot gas defrost, both IA2 and IA3 must reach Ftt.
- 6 When MLH<MLL, there is a delay of 10\*(MLL-MLH) seconds on Ip switch. Eventual pumpdown restart is over MLH+1 bar.
- 7 Fixed time 120 s and manual reset.
- 8 When activated, pump down mode forces compressor continuous run, switched off only by low pressure limit.
- 9 Forced refrigeration is disabled when room temperature is under LFL, forced heating is disabled over LFH.
- 10 When speed regulation is off the fan is operated on-off.
- 11 Caution! Speed regulation can cause fan fault or electronic board fault. Low and average minimum speed can increase the risk.
- 12 During the first 10 seconds of speed regulation, the n1L is replaced by (n1H+n1L)/2.
- 13 No action if the light is switched on from inside the room.
- 14 When off, the refrigeration solenoid is steadily on during cooling, as long as overheating is higher then vtL or b3A is off.
- 15 Caution! Low overheating causes liquid return and compressor damage.
- 16 Caution! Short duty cycle reduces valve life.
- 17 Caution! Low overheating causes liquid return and compressor damage.
- 18 Caution! High adaptation speed causes swing in the suction line and damage to the compressor.
- 19 In H422V9, starting from revision 14, when b1A is on, b4A is off, and b4C is non-zero, use AN-4 reading with set at 0.0  $^{\circ}$ C + b4C to concur for low temperature alarm and to stop cooling.
- 20 The low temperature differential is fixed, and alarm status stops at 0.2  $^\circ\text{C}$  above the set point.
- 21 The high temperature differential is fixed, and alarm status stops at 0.2  $^\circ\text{C}$  under the set point.
- 22 Passing from stand-by to on and at power on, there is a 5 second delay spent in a virtual stand-by.
- 23 The minus sign on display ("-") signals that output is going to start after a delay.

### 3 Alarm list

Display	Alarm	
A01	low temperature	Low temperature limit has been reached.
A02	high temperature	High temperature limit has been reached.
A03	mc alarm	Pressure switch, thermistors, or any other compressor safety device has disconnected.
A04	evaporator alarm	Evaporator thermal relay, or other evaporator safety device has disconnected.
A05	defrost alarm	defrost safety thermostat, or any other defrost safety device has disconnected.
A06	door open	Time limit for door opening has been reached.
A07	mc phase	Compressor overload/thermal relay disconnected, or missing mains phase - manual reset.
A08	low temp stop	Low temperature limit for full stop has been reached - full system stop - manual reset.
A09	high temp stop	High temperature limit for full stop has been reached - full system stop - manual reset.
A10	oil pressure	Oil differential pressure remained under minimum value for 120 seconds - manual reset.
A11	low humidity	Low humidity limit has been reached
A12	high humidity	High humidity limit has been reached.
A13	low humid stop	Low humidity limit for full stop has been reached - full system stop - manual reset.
A14	high humid stop	High humidity limit for full stop has been reached - full system stop - manual reset.

#### 4 Slave alarm list

Display Alarm A96 slave EEPROM Failed write operation onto the slave EEPROM.



Display	Alarm	
A97	out of range	The slave address EdS might be out of the master range, the latter going from 1 to PdS.
A98	no link	The slave does not receive any message from the master.
A99	lost link	The slave lost the communication with the master.

# 5 Button list

	Push button	Function
B1	esc - silence - skip	Exit without saving from any menu - alarm buzzer silence - skip compressor delay.
B2	up	Up navigation in the menu.
B3	on/stand-by - pause	Toggle between on and stand-by - toggle evaporator fan stop.
B4	left - light	Left navigation in the menu - switch the light on and off.
B5	down - defrost	Down navigation in the menu - force immediate defrost.
B6	right - menu - set	Right navigation in the menu - display and modify the set point - enter menu.

### 6 Led list

	Led	Function
L1	compressor	On during compressor run - blinking slowly during activation delay and pumpdown.
L2	evaporator	On during evaporator run - blinking slowly during activation delay and pumpdown.
L3	defrost-hum-deh	On during defrost and humidification - blinking slowly during dripping and dehumidification.
L4	air renew	On during air renew.
L5	heating	On during heating.
L6	unused	Unused in this application.
L7	light	On when lighting is on - blinking slowly during deactivation delay.

### 7 Soft command list

	Soft command	Function
/	None	This instrument has no software commands

# 8 How to ...

How to	Function
Switch between on and stand-by.	Keep pressed B3 button, to activate and deactivate stand-by. In stand-by every output is disabled except light, leds from L1 to L6 blink, timers continue to count.
Stop or restart evaporator fans.	Press shortly the B3 button. When the evaporator fans are stopped, the display blinks.
Program the menu.	Keep pressed B6 to enter the menu. Navigate up and down with B2 and B5. Select the submenu by B6. Change the parameter by B2 and B5, press B6 to confirm, or B4 to go back without saving. The changes will have effect after the exit from programming pressing B4 repeatedly. Press B1 to exit immediately without saving any parameter.
Show or change temperature set.	Press shortly B6 - the display shows the current set point - change it by B2 and B5, and confirm it by B6. As alternative, enter the menu program as explained above, modify the parameter $\_$ t0, then confirm it.



How to	Function
Force an air renew.	Keep pressed B2.
Force a defrost.	Keep pressed B5.

#### 9 Shortcut list

Buttons to press	Shortcut description - keep pressed 5 seconds
B5	Force an immediate defrost.
B2	Force an immediate air renew.

#### 10 Led and push button location

